



# LAKLAND®

## LH3 CONTROL LAYOUT

4-Series • 44-02 • 55-Series • 55-02

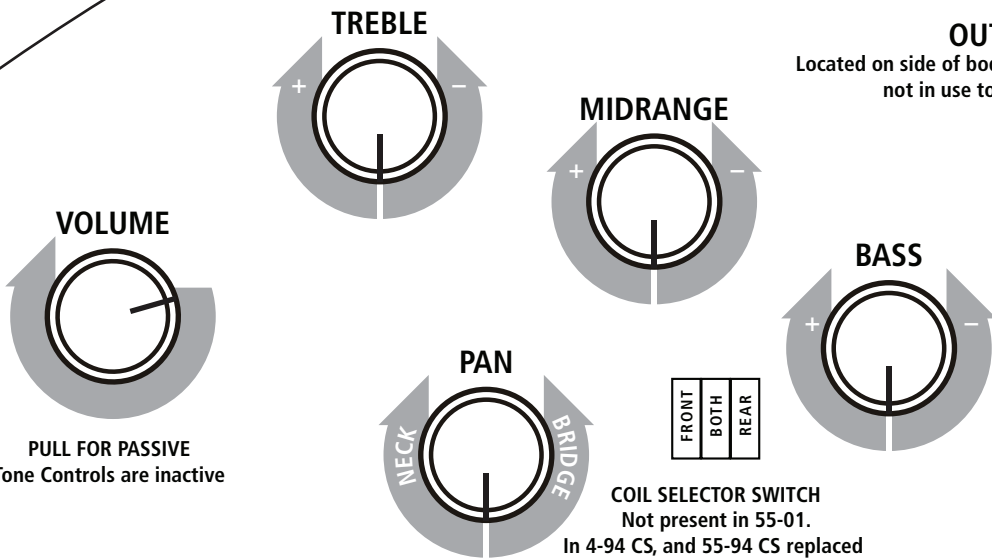


**OUTPUT JACK**  
Located on side of body. Disconnect patch cord when not in use to maximize battery life.

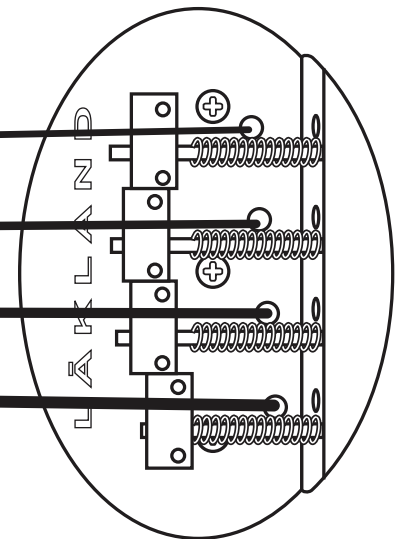


### LH3 MIDRANGE FREQUENCY SELECTIONS


For more selections visit [www.Lakland.com](http://www.Lakland.com)

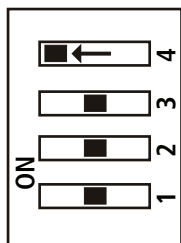


1100 Hz

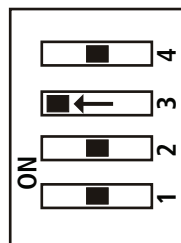

900 Hz

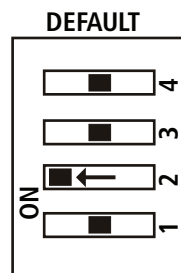

600 Hz

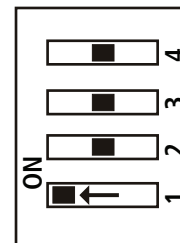

275 Hz